


HOW TO USE **XSP** LITE




1. Cut the bases for the edges and the corners

Cut the base to adjust the pedestal position as close as possible to the edge using the base cutting guides.

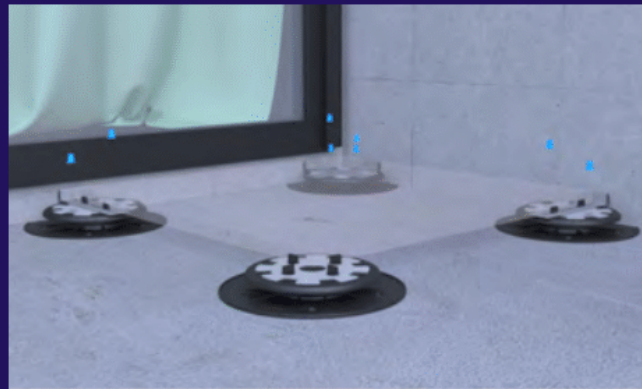

2. Remove the edge and corner spacers

Remove the four spacers in the pedestals located in corners and two parallel spacers in the pedestals located at the edges.

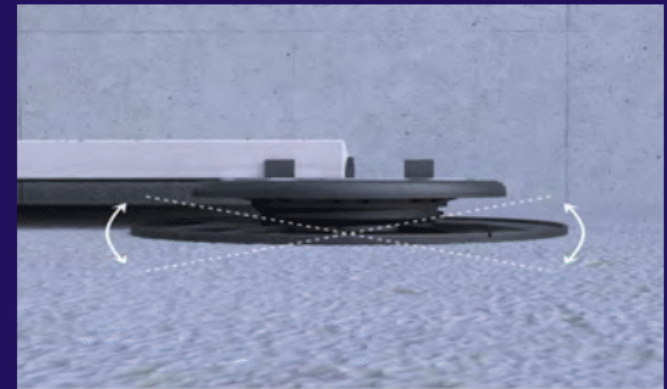

3. Self-levelling base

The bases allow correcting up to a 3% of the tilt.




4. Slab levelling

Rotate the base clockwise to lift the slab and anticlockwise to lower it, until levelled.



5. Create the edge trim seal

Use the perimetral dilators (accessory) to create edge trim seals and allow the expansion of the slabbed surface without transferring any tension to the perimetral parameters.

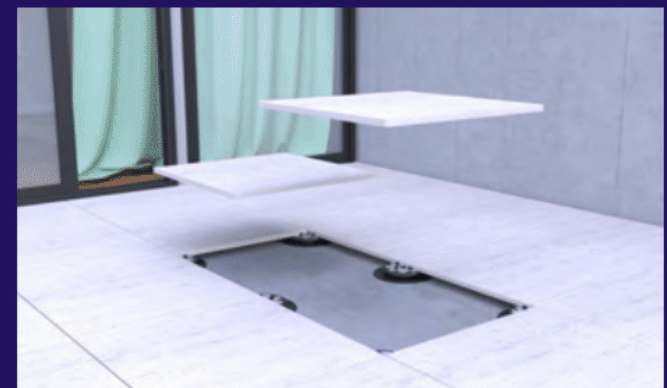

6. Removable floor

Finally, we get a fully removable surface that allows access to lower facilities such as sumps, electrical wiring, pipes, etc.

MODE OF USE

