
zuiver°

Thank you for purchasing this Shelf Rise. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.

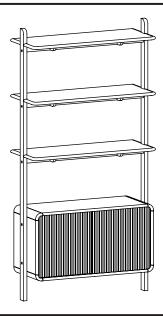

Pre-assembly preparation

Please ensure instructions are read in full before attempting to assemble this product.

People to assemble



Tools required



Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the retailer from whom you bought this product.

This product is **HEAVY**, it should be assembled as near as possible to the point of use. **TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product.

This product takes approximately 40 MINUTES to assemble with 2 PEOPLE.

The fittings pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.

Read this leaflet in full before commencing assembly.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

Fittings and parts checklist


Parts checklist								
1	Left leg x1							
2	Right leg x1	LOGO						
3	Top shelf x1	Wall bracket fixing hole	4	Middle shelf x2				
5	Cabinet x1		6	Reeded glass door x2				

Fitting checklist								
Α	Wood dowel x10 Ø8x30mm		В	Long bolt x6 M6x70mm				
С	Middle bolt x4 M6x35mm		D	Short bolt x4 M6x12mm				
E	Barrel nut ×6 M6		F	Sleeve nut x4 M6x15mm				
G	Wall bracket x4		Н	Allen key #4 x2				
I	Flat washer x4 Ø9x1.0mm		J	Felt pad ×2				

Step 1


With 2 people, carefully place all the shelves (Part 3 and 4) and the cabinet (Part 5) on a soft, flat surface near where the unit will be used. Locate the legs (Part 1 and 2) and attach them to the shelves and cabinet using 10x wood dowels (Part A), as shown below.



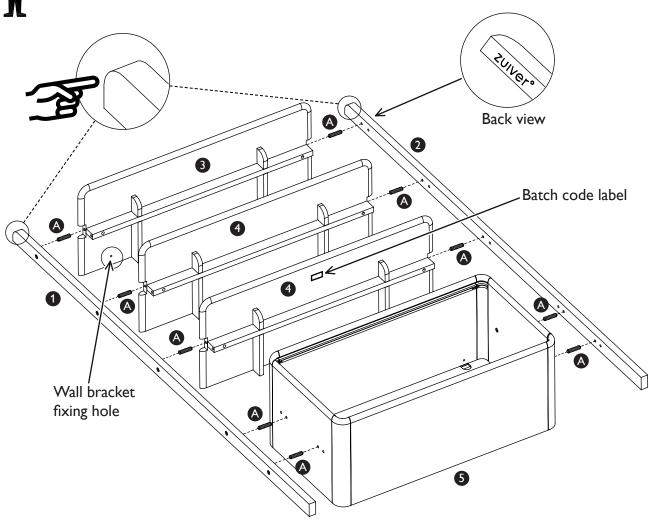


Step 2

Secure the two legs (Part 1 and 2) to the cabinet (Part 5) using the middle bolt (Part C) and sleeve nut (Part F). Fully tighten with two Allen keys (Part H) as shown below.

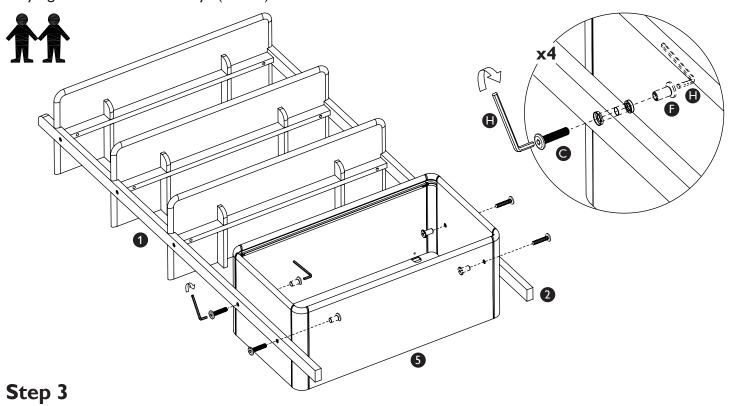


Insert the barrel nut (Part E) into the shelf support rail hole, aligning it to receive the bolt. Secure legs to shelves with long bolt (Part B) and Allen key (Part H). A screwdriver (not included) may be used with the Allen key if needed, as shown below.

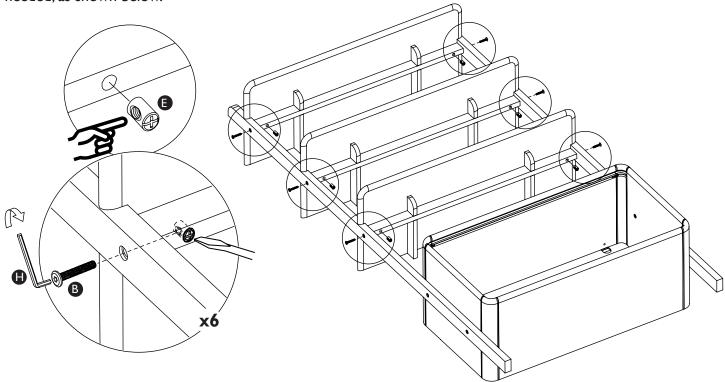

Step 4

Fix the wall brackets (Part G) to the top shelf (Part 3) and cabinet (Part 5) using the short bolt (Part D) and the Allen key (Part H) as shown below.

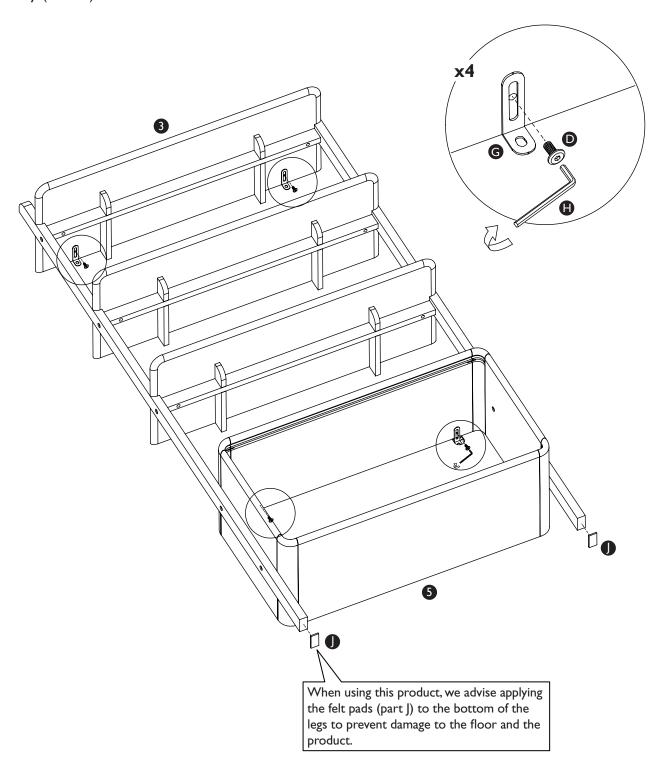

Wall fixing - if in doubt seek professional advice

Please ensure to use the correct size rawl plug when installing the wall bracket to a wall. If your wall is cavity construction or wood you may need to seek appropriate wall fixings.




Wood

If fixing to wood make sure that it isn't chipboard as screws can easily pull away from the core structure.



Brick or Masonry

Use an appropriate wall plug provided you are sure your wall is sound.

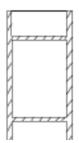

Cavity wall

Special toggle wall plugs are needed.
Seek expert advice.

Step 5


Adjust the wall brackets (Part G) to be flat against the wall and use a pencil (not included) to accurately mark the position of the screw holes onto the wall. Now carefully move the shelf away from the wall to create space for drilling.


Note: 1 person to hold the shelf, while the 2nd person make the mark.





With two people, carefully place the shelf flat on the ground to create space for drilling.

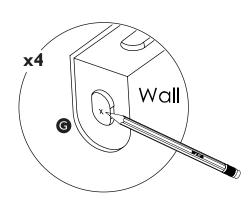


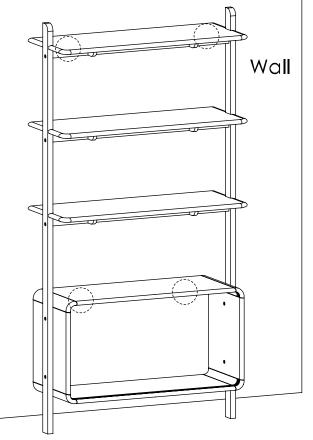

Step 6

Before drilling, ensure the size of holes will be correct to fit the rawl plug (not included). Drill the hole according to the marked position and push the rawl plug (not included) into position as shown below.

Warning: Ensure the area to be drilled is free from hidden electrical wires, water and gas pipes.

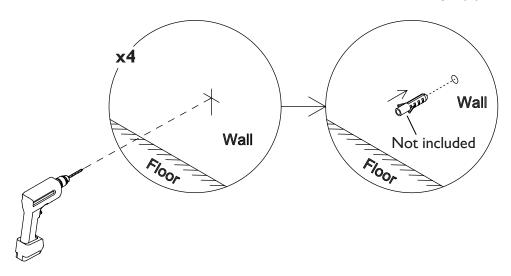


Step 7


Secure the four wall brackets (Part G) to the wall using the flat washers (Part I) and screws (not included). Tighten with the screwdriver (not included).

Note: 1 person to hold the shelf, while the 2nd person fixes it.



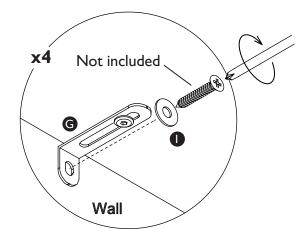


WARNING!
In order to prevent
overturning, this product
must be used with the wall
attachment device provided.

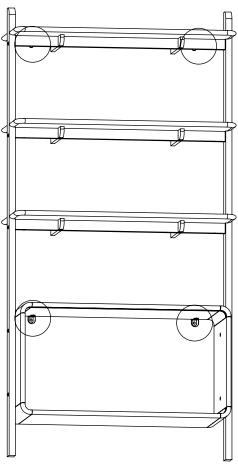

Step 8

Locate the reeded glass door (Part 6) and carefully insert it into the designated inner slot first. Next, insert the remaining glass door into the designated outer slot, as shown below.

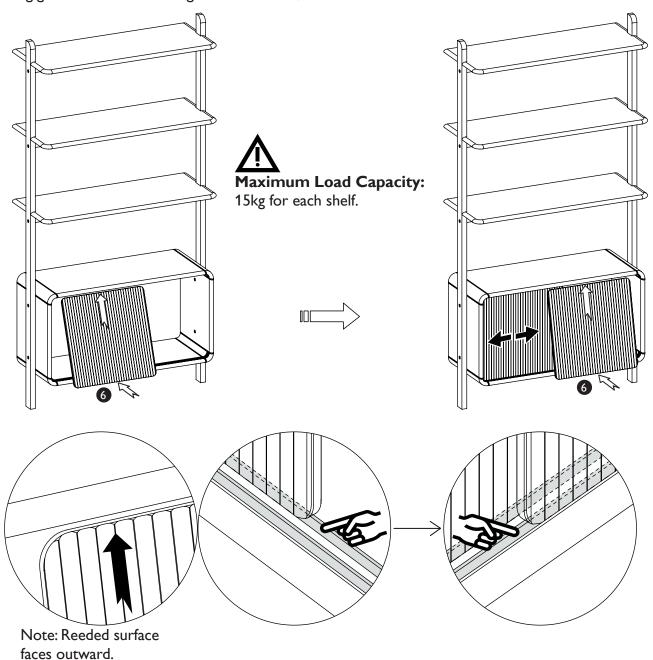

PLEASE READ!

This veneered product has a natural open grain finish. Please read the care guide thoroughly. We recommend using mats and wiping up spilled liquids immediately.

Avoid placing plant pots or vases with out waterproof mats to prolong the life of this product.

Care and Maintenance

Wood furniture

- Wood displays different grain patterns depending on which way they cut for example, the 'medullary rays' which can appear is a mark of good quality timber these are just characteristics of the natural beauty of the wood. Some furniture is also deliberately aged and rustic.
- Wood veneers also allow distinctive patterns to be created on flat surfaces, such as table tops and drawer fronts by the way the slivers are arranged.
- All timber surfaces will change colour and mellow over time. New furniture will initially vary in shade from items that have been previously purchased.

How to care for your glass and wood furniture

- Furniture with a hard lacquer, wax polish or painted surface should be dusted with a dry cloth.
- Spray polishes are best avoided as they contain silicones which may spoil the furniture's surface by building up over time.
- Make sure all surfaces are protected from heat and liquids by mats and coasters. Wipe up spills immediately and ensure that a mat or pad is placed under paper if you are writing.
- Our furniture will endure most temperatures in the home but it is best to avoid placing furniture next to heat sources such as radiators or fires. Be particularly careful with solid wood as the lack of humidity caused by central heating can cause damage such as warping.
- For glass elements use glass cleaner or soapy water for cleaning, do not use anything abrasive as this may damage the surface of the product.

Safety instructions

- · Never drag furniture when moving it, always lift it.
- Do not sit or stand upon this product.
- Periodically check all fixings to ensure none have come loose and re-tighten where necessary.
- Please take care when handling or moving the furniture, careless handling may cause damage or injury.
- Furniture can be dangerous if incorrectly installed. Assembly should be carried out by a competent
 person. No liability will be accepted for damage or injury caused by incorrectly installed or assembled
 furniture.
- It is recommended that before moving heavy objects to a new location they are completely dis- assembled to avoid personal injury or damage to the furniture. Please be careful to retain all fittings when doing this.

Glass furniture warning

- Do not use the glass as a chopping surface. Do not strike the glass with hard or pointed items.
- Do not sit or stand upon glass surface(s).
- Tempered glass is designed to break into very small fragments for customer safety. On very rare occasions including when not in direct use, glass can break for the following reasons:
 - -Surface damage and scratches. Please take extra care to ensure no heavy or sharp objects impact this product.
 - -Extremes of temperature. Avoid areas where the item can become very hot and cold.

Experiencing problems with your new product?

Before calling customer service, please have your item's batch code ready.

You can find the batch code on the back or bottom of your product as below shown.

(example batch code: 190510)

