 


ASSEMBLY INSTRUCTIONS

 
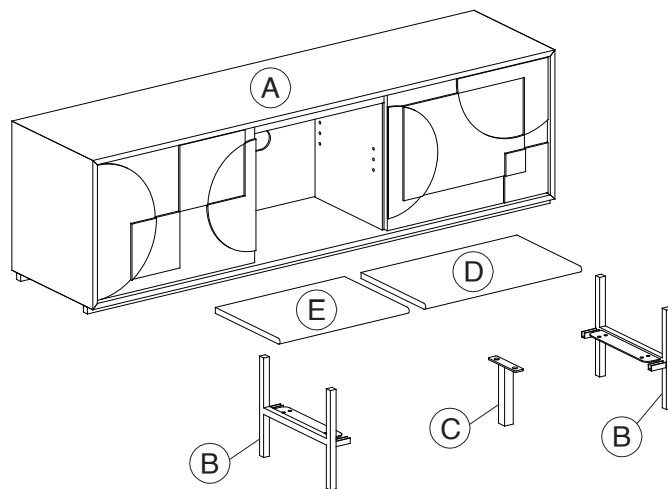 



Please read the instructions carefully for correct and safe assembly.

1

- (A) BODY x1
- (B) LEG x2
- (C) CENTER LEG x1
- (D) LONG SHELF x2
- (E) SHORT SHELF x1



2

- | | | | |
|----|----------------------|---|-----|
| 01 | JCBC (M6x20mm) |  | x10 |
| 02 | ALLEN BOLT (M6x15mm) |  | x08 |
| 03 | SPRING WASHER |  | x10 |
| 04 | FLAT WASHER |  | x10 |
| 05 | ALLEN KEY |  | x01 |

 
 
Phillips head screwdriver
tool needed (not include)



Thank you for
purchasing this
Zuiver product.

ASSEMBLY INSTRUCTIONS



Please read the instructions carefully for correct and safe assembly.

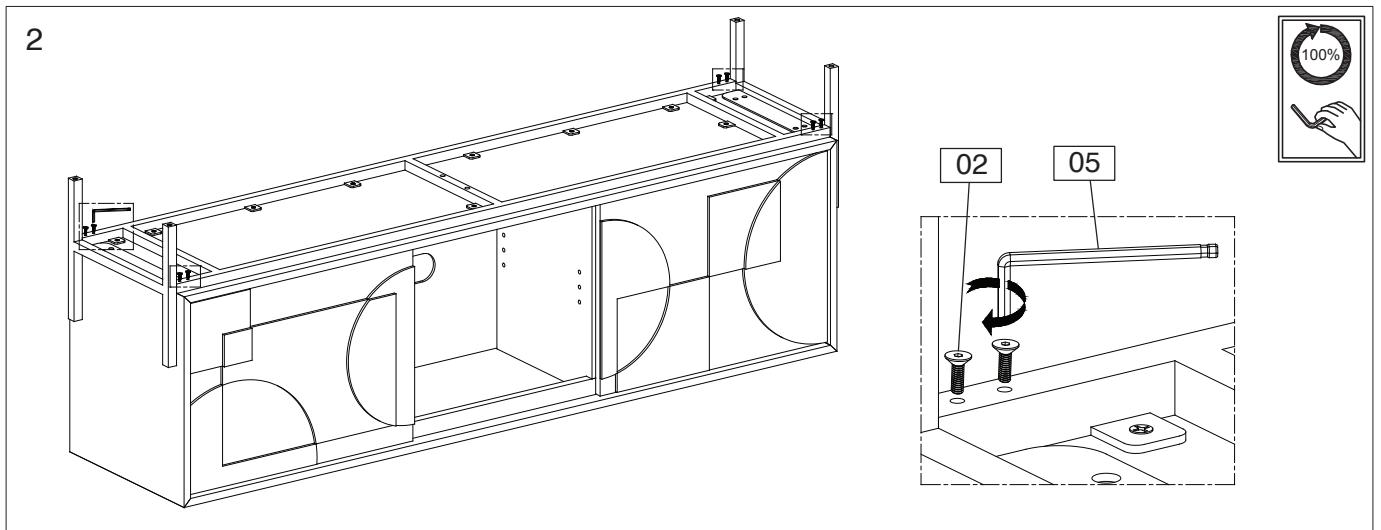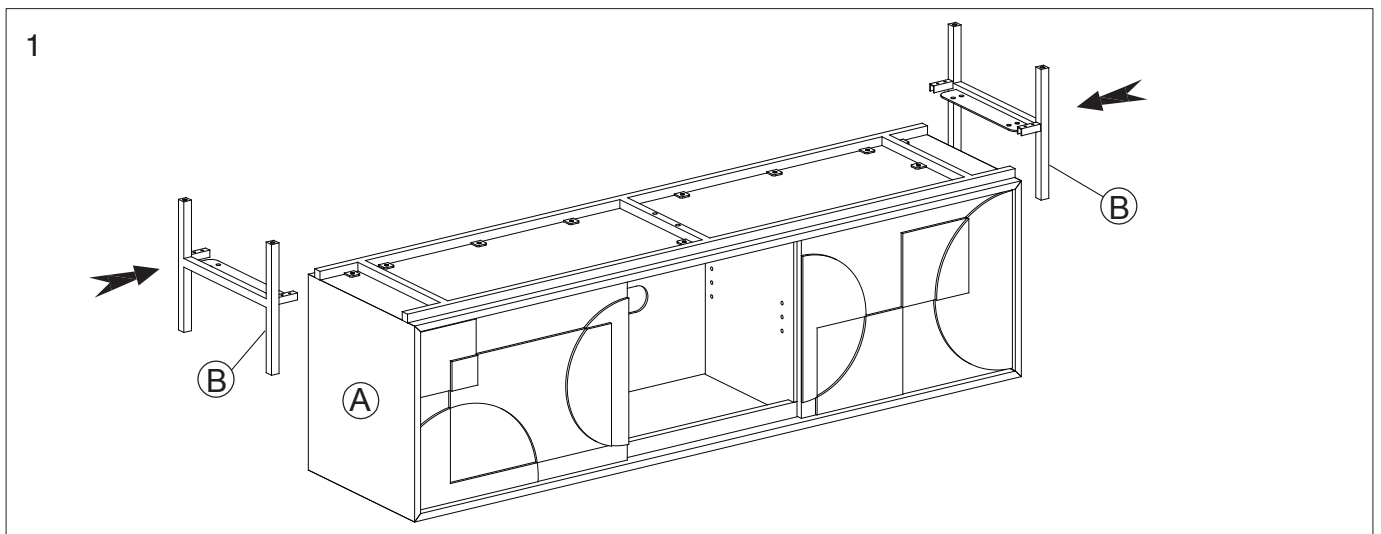

Thank you for
purchasing this
Zuiver product.

ASSEMBLY INSTRUCTIONS

 
 
Please read the instructions carefully for correct and safe assembly.

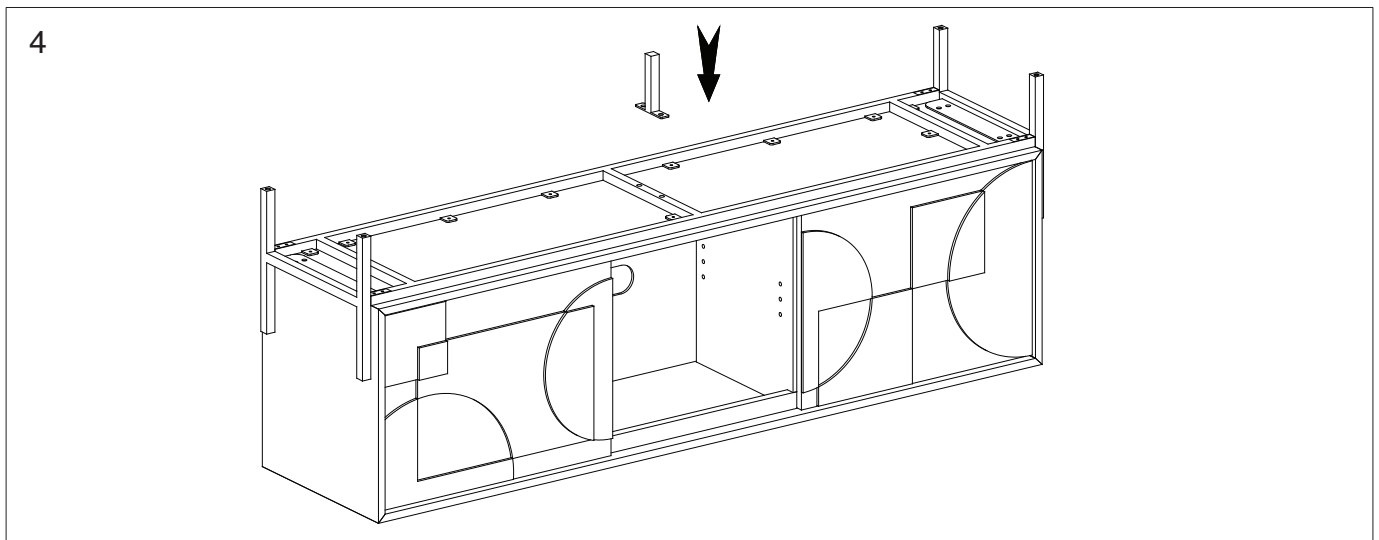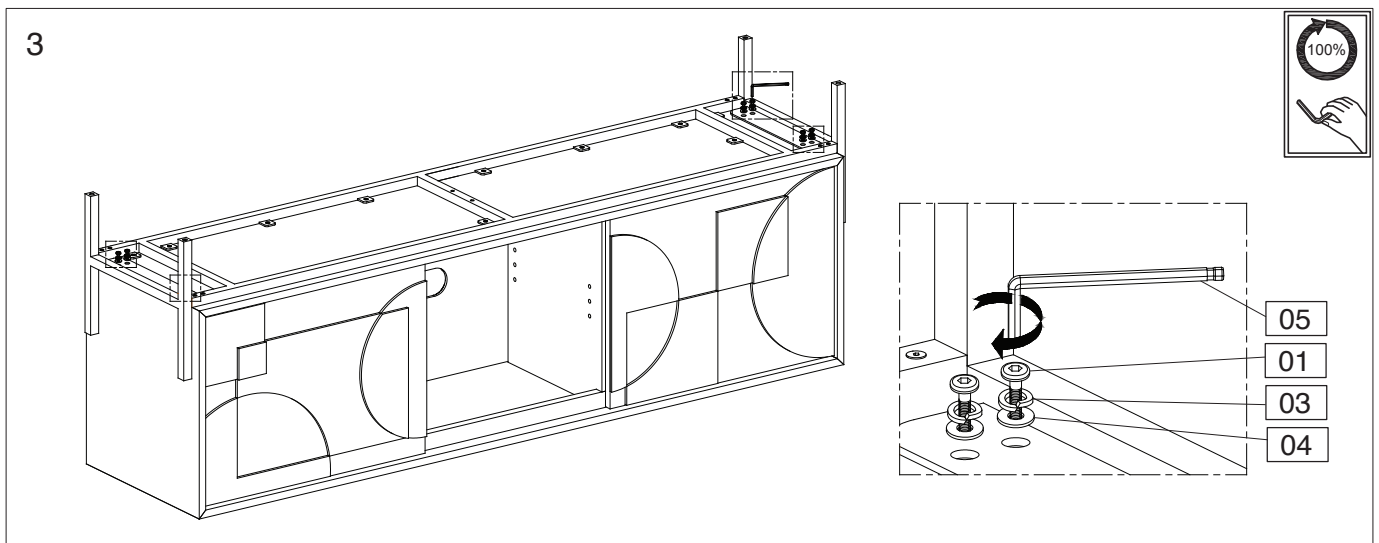

Thank you for
purchasing this
Zuiver product.

ASSEMBLY INSTRUCTIONS

  Please read the instructions carefully for correct and safe assembly.

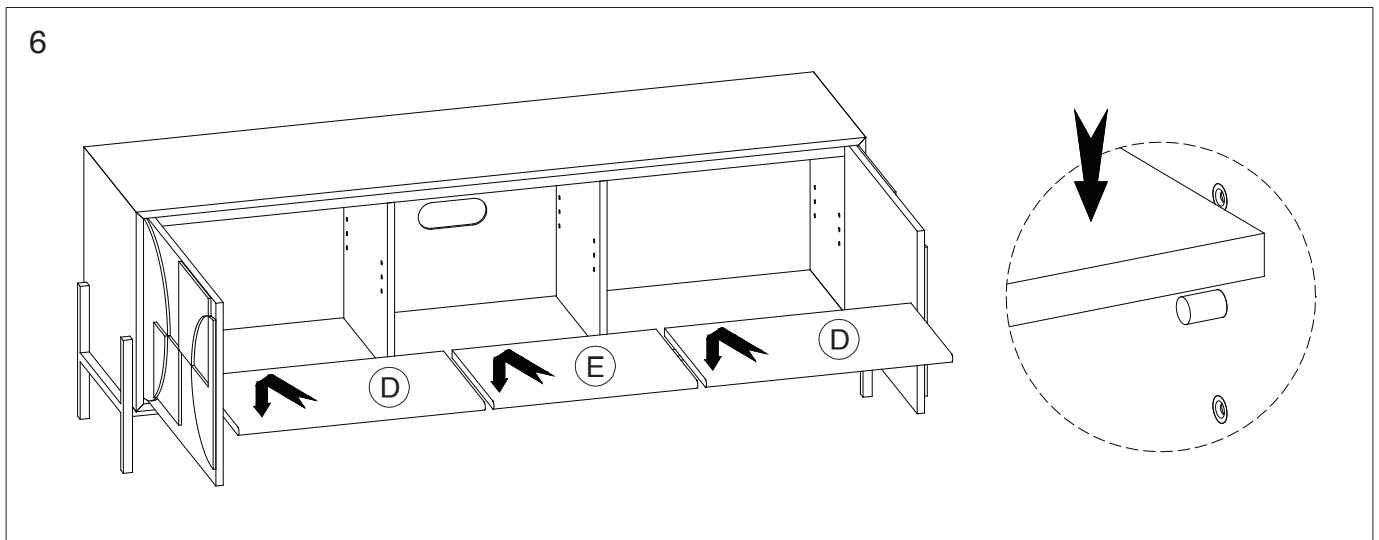
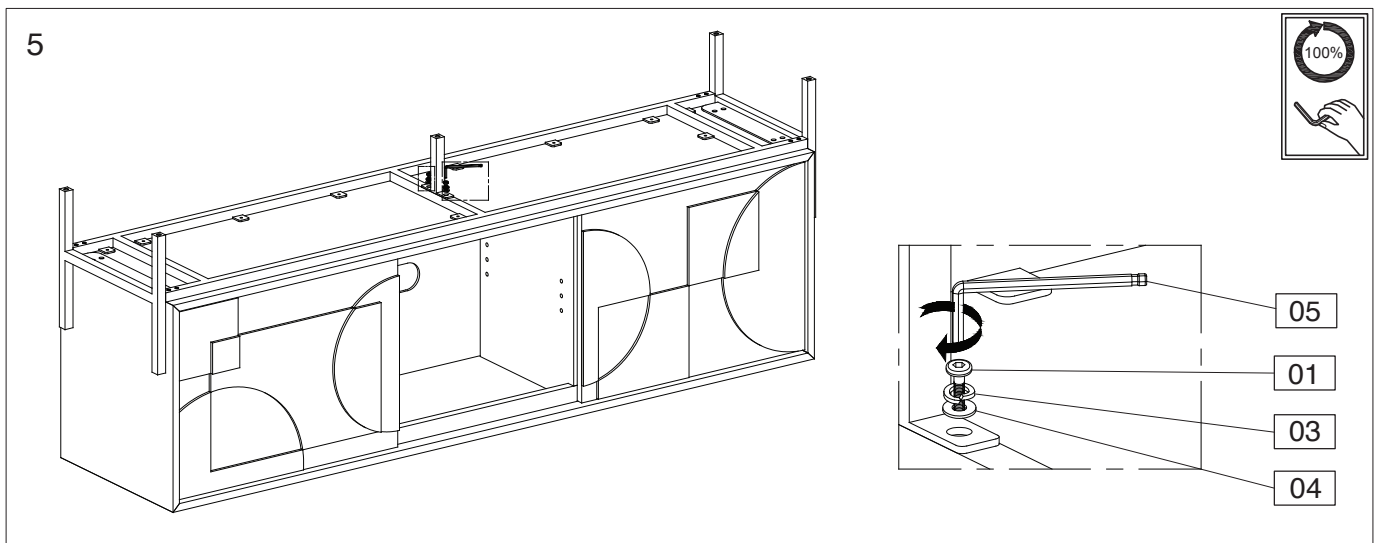


Thank you for
purchasing this
Zuiver product.



ASSEMBLY INSTRUCTIONS

Please read the instructions carefully for correct and safe assembly.

  
7

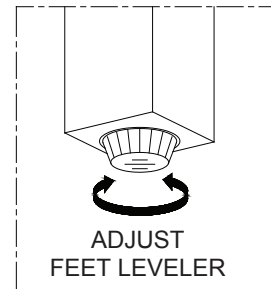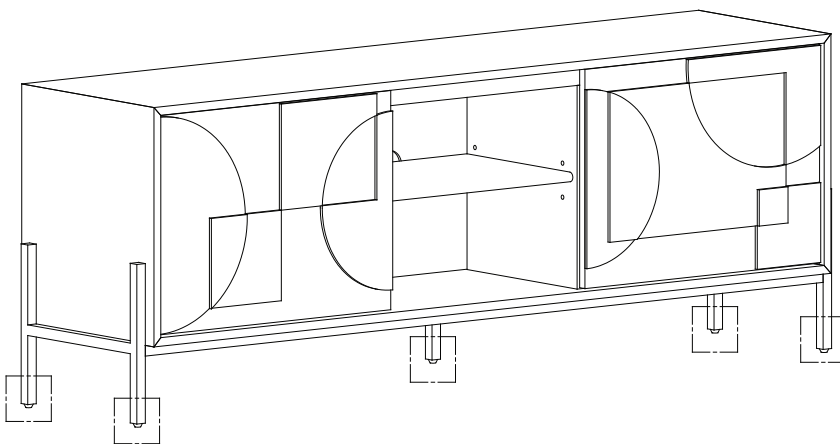

HINGE ADJUSTMENT

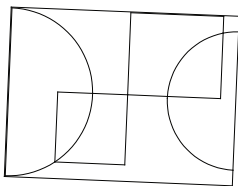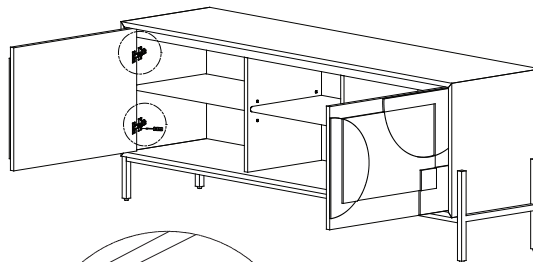  

 The door is not flush with the side panel.

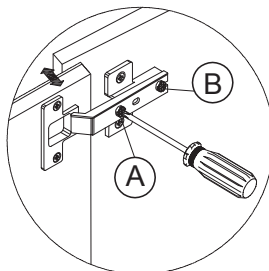


Side to Side Adjustment
loosen screw A, adjust gap with screw B and re-tighten Screw A.

Thank you for
purchasing this
Zuiver product.


ASSEMBLY INSTRUCTIONS

Please read the instructions carefully for correct and safe assembly.

 HINGE ADJUSTMENT




 The door appears too far or too close from the front edge of the side panel.

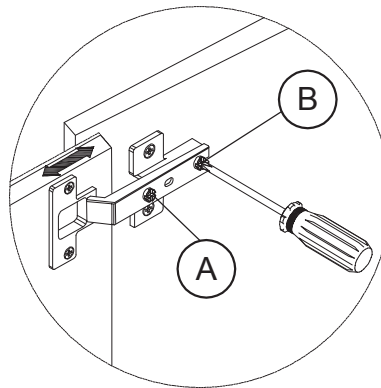


Depth Adjustment

 loosen screw A, push hinge arm forwards or backwards, re-tighten screw A and secure Screw B with a 1/4 turn clockwise.

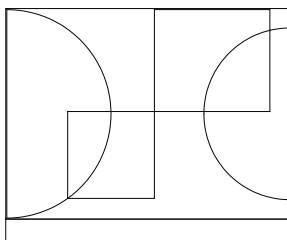

 The door is not flush with the vertical panel.

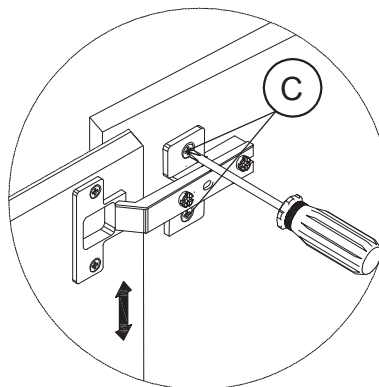

Height Adjustment

loosen screw C, adjust door height and re-tighten screw C.

* The doors can be adjusted in all 3 directions to create an even fit between doors on this cabinet. Follow the appropriate directions above to adjust door(s) as necessary.

Thank you for
purchasing this
Zuiver product.

FURNITURE TIPPING RESTRAINT FOR SIDEBORD FACES

Young children may be injured by tipping furniture and the use of a tipping restraint is highly recommended.

When properly installed, this restraint could provide protection against the unexpected tipping of furniture due to small tremors, bumps or climbing. We recommend mounting this restraint to a wall stud.

WARNING: This product is only a deterrent. It is not a substitute for proper adult supervision.


TIPPING KIT CHECK LIST

CODE	COMPONENT	QTY
01	PLASTIC STRAP	2
02	SCREW	4
03	NYLON WALL PLUG	4
04	PLASTIC BRACKET	2
SCREWDRIVER TOOL NEEDED (NOT INCLUDED)		

Installation Instruction:

1. Determine the final position of the furniture piece. Mark location on the wall approximately 2" below the plastic bracket (04) mounted to the back of the furniture.
2. Drill a starter hole into the wall stud. If wall stud is not available, drill a hole into the wall and insert nylon wall plug (03). Gently tap plug until the flange of the plug is flush with the wall.
3. Attach a second plastic bracket (04) by inserting and securing the screw (02) to the wall. Refer to picture B.
4. Align the two plastic brackets (04).
5. Thread the plastic strap (01) through both plastic brackets (04) and tighten until snug.
6. Check to make sure that the plastic brackets (04) are firmly installed the plastic strap (01) is secure.
7. Repeat steps 1-6 at other end of furniture piece.

 A

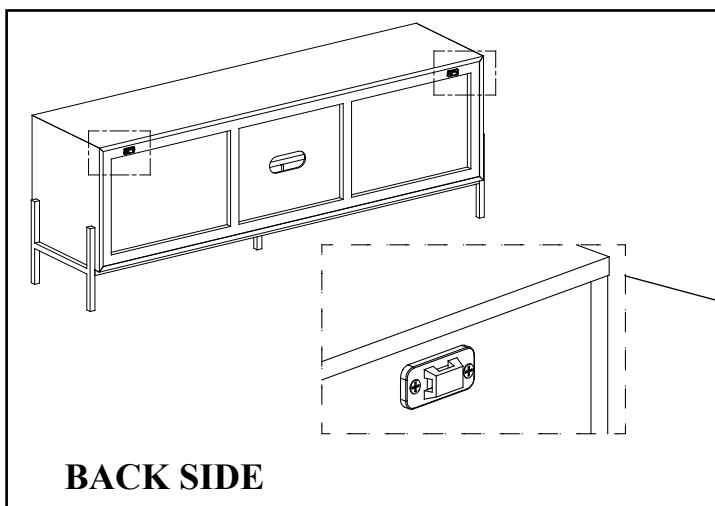

B

