

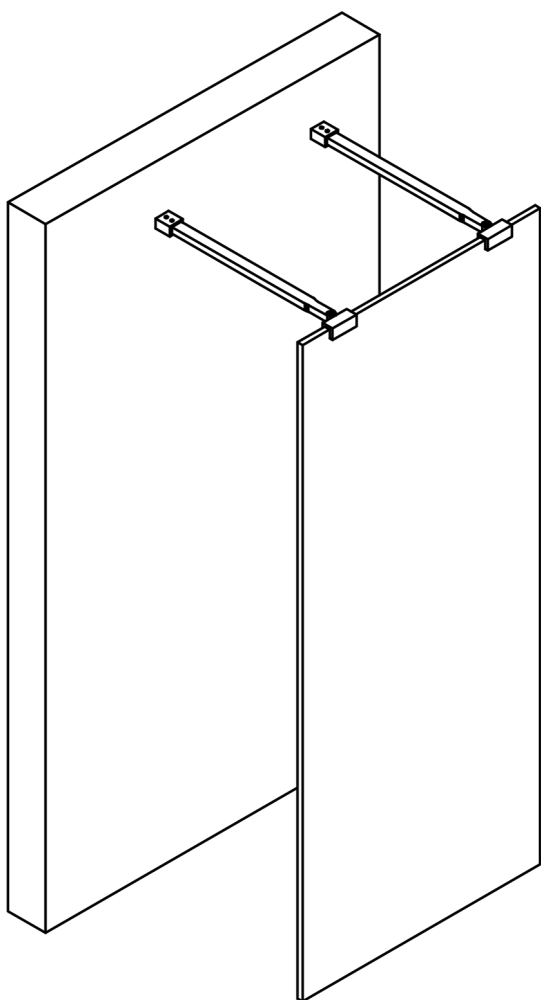
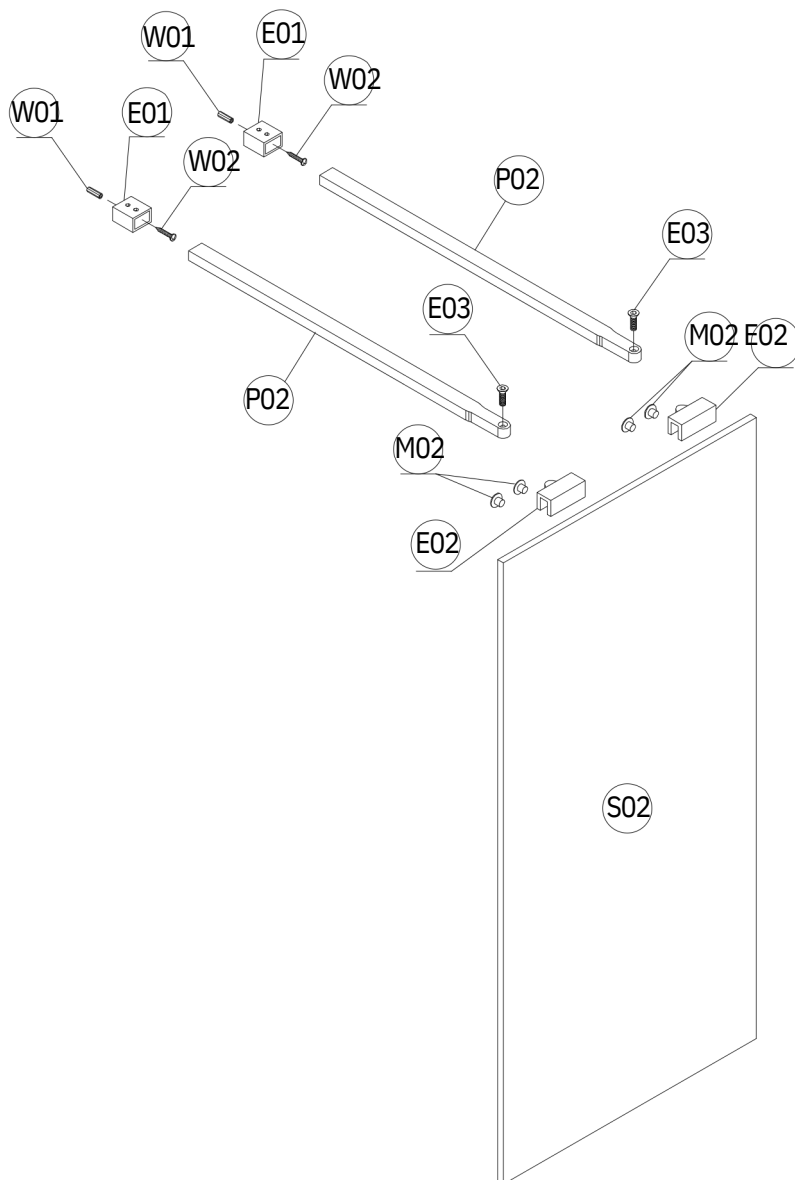






Walk in AVEO DUE AVD-120-195-C











number		description		quantity	sketch
P02	PWAVWP02C1	Bracket AVEO DUE, length 1200 mm, chrome	pcs	2	
M02	MSUUWM02C1	Cover/cap for AVEO DUE bracket, chrome	pcs	4	
E01	EWUUWE01C1	Wall mounting for AVEO DUE bracket, chrome	pcs	2	
E02	EWUUWE02C1	Glass/bracket fixing for AVEO DUE, chrome	pcs	2	
E03	WSUUWE03C1	Screw M6×16 for AVEO DUE bracket, chrome	pcs	2	 M6X16
W01	WKUUUW01D1	Mounting plug Ø6 mm, plastic	pcs	2	
W02	WRUUUW02C1	Screw ST4×30, chrome	pcs	2	 ST4X30
S02	SSAVWS02P4	Fixed flat glass AVEO DUE 1950 × 1200 × 8 mm, clear	pcs	1	

pencil		rubber mallet	
cross-head screwdriver		utility knife / cutter knife	
clear sanitary silicone		Ø6 mm Φ drill bit	$\Phi 6$ 
spirit level / bubble level		drill	
measuring tape (min. 2 meters)		hex key 4 mm	
hex key 2.5 mm			


Most common installation mistakes:

1. Uneven shower base/subfloor leveling
2. Incorrect glass positioning — the glass must be placed parallel to the wall, with the ProClean coated side facing inwards
3. Incorrect bracket installation — make sure the installation is level and the bracket is fixed in the correct area on the glass (close to the outer edges)

1

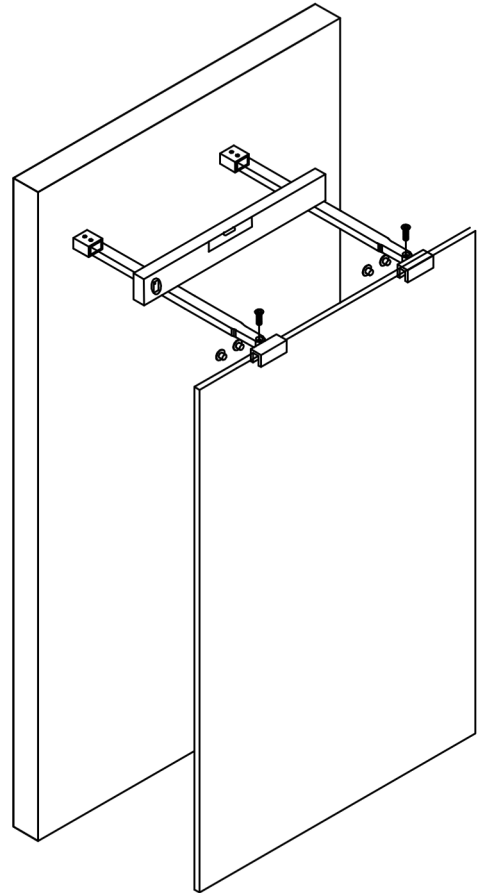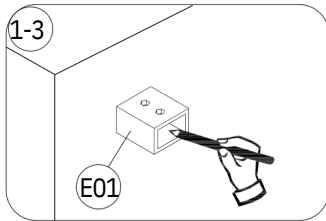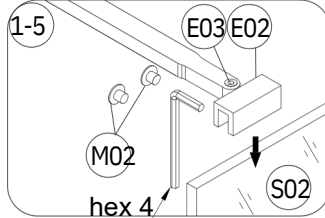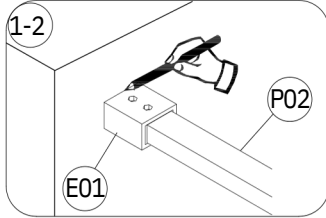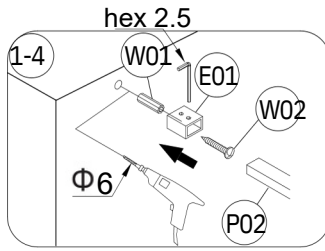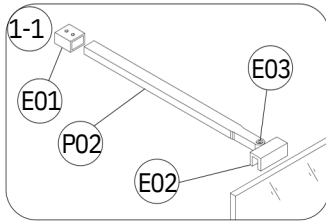

2

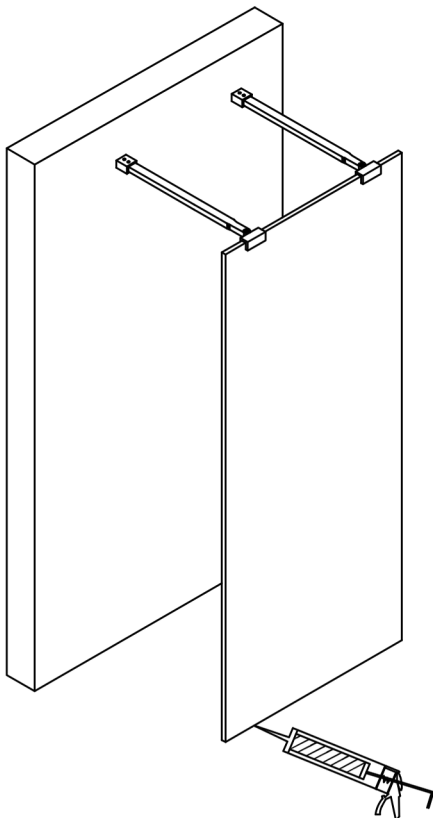

Operating recommendations:

Do not use the shower enclosure for **48 hours** after installation is completed.

Do **not** use corrosive or abrasive cleaning agents.

How to care for Besco shower enclosures?

To enjoy your shower enclosure for many years without issues, simply follow a few basic maintenance rules.

Always use only soft sponges or cloths and cleaning agents that do not contain corrosive or abrasive particles, as these can easily damage the glass surface of the enclosure.