

Shower Trays Made of Cast Marble

Use

The product is intended for personal hygiene in residential, public, healthcare, and industrial buildings.

Cleaning

Cleaning can be carried out using standard liquid cleaning agents. Shower trays must not be cleaned with abrasive cleaners containing sand or similar materials. Do not expose the product to acids, ammonia, chlorine, drain cleaners, or hair dyes.

The trays can be polished with gentle wax (e.g. car wax polish). In case of surface scratches, polish with wax or obtain a special repair kit for deeper scratches from the seller.

Fire: Non-flammable material

Chemicals: Liquids commonly used in bathrooms do not damage the material.

After 14 hours of exposure, no visible traces remain from the following substances: Ethyl alcohol, Acetone, Chlorine-based disinfectant (6.6% sodium hypochlorite), 10% citric acid solution, Benzene

After 6 hours of exposure, traces of the following substances can be removed: Shoe polish, Ink, Coffee, Blue laundry detergent, Cosmetics

Thermal Shock

Resistance to thermal shock according to the standard (EN). Testing requires a minimum of 500 cycles.

One cycle consists of:

- 1.5 minutes of 10°C water flowing into the tray
- followed by 1.5 minutes of 65°C water flowing into the tray

Warranty

The warranty period is 3 years from the date of purchase by the end user and must be confirmed with a sales receipt.

The warranty covers functional and aesthetic defects caused by manufacturing faults.

The warranty does not cover:

- damage caused by improper use
- improper installation
- surface repairs carried out by the user


The warranty also does not cover air bubbles on the underside of the tray.

Service


For warranty and post-warranty service requests, contact your dealer. If the dealer cannot provide service, contact the manufacturer:

Tel: +420 775 579 903


Email: servis@gelco.cz

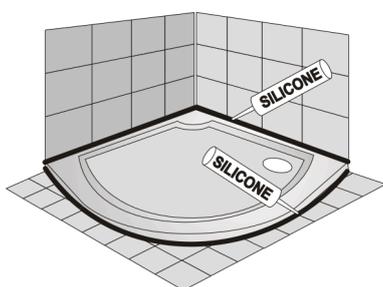

Installed on the floor

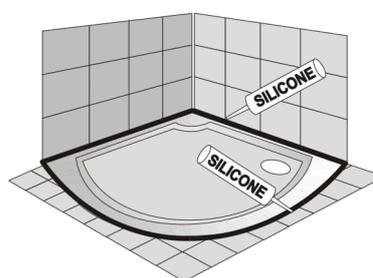

Recessed into the floor

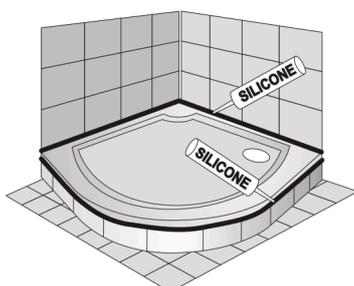

Built-in and tiled



With front panel

Installation Instructions

Before Installation

Before installing the shower tray, check that it is level and not visibly damaged. Claims will not be accepted after installation of a damaged tray.

The Shower Tray Can Be Installed:

- A) On adjustable feet (legs) (Feet are not supplied with some larger trays and can be replaced with full underlay support)
- B) On adjustable feet with a front panel (Not available for trays without feet)
- C) Placed directly on the floor with the siphon recessed
- D) Fully recessed into the floor

Warning

- ! Do NOT install the shower tray before wall tiling is completed.
- ! IRENA shower trays must always be installed with the siphon facing the wall.

Installation Procedure

- Lay out the drain pipes, siphon, and possibly a concealed faucet box.
- Place the shower tray legs.
- Position the tray in the required place and mark the siphon location on the floor.
- Lead the drain pipes to the marked location and connect the siphon.
- Gradually place the tray onto the pipes so that the siphon is properly positioned.
- Mark the position of the pipes on the tray.
- Drill holes for pipe connections.
- Connect the drain pipe and siphon.
- Install the tray in position and screw in the adjustable feet.
- Level the tray.
- Tighten the siphon.
- Seal around the tray with silicone sealant.

Technical Data

- Adjustable feet height: 90–110 mm
- Siphon opening: 90 mm
- Flow rate: 35–52 l/min