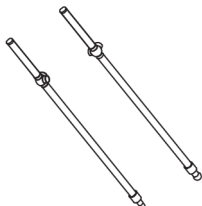

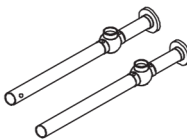
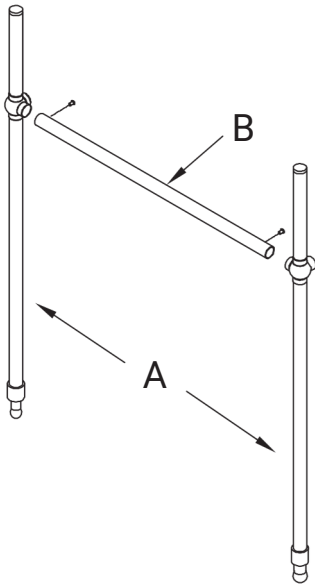
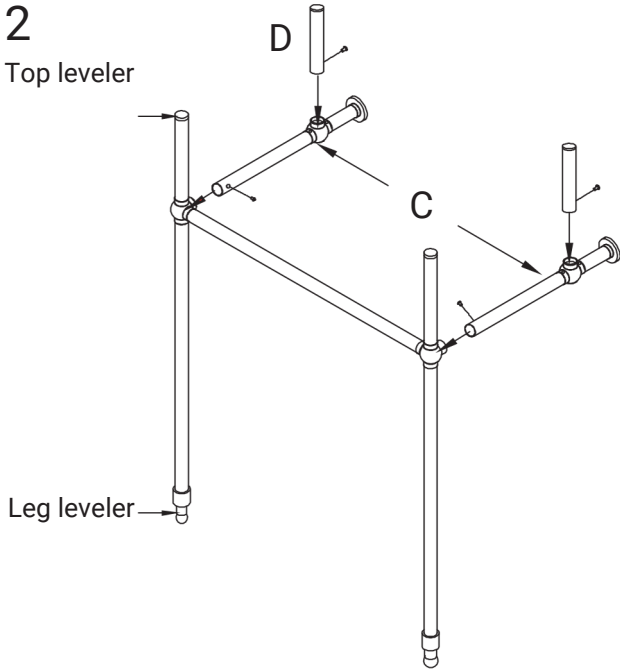
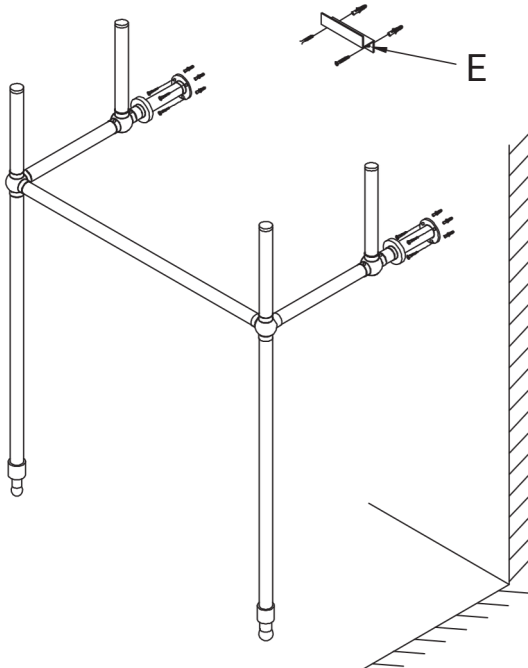
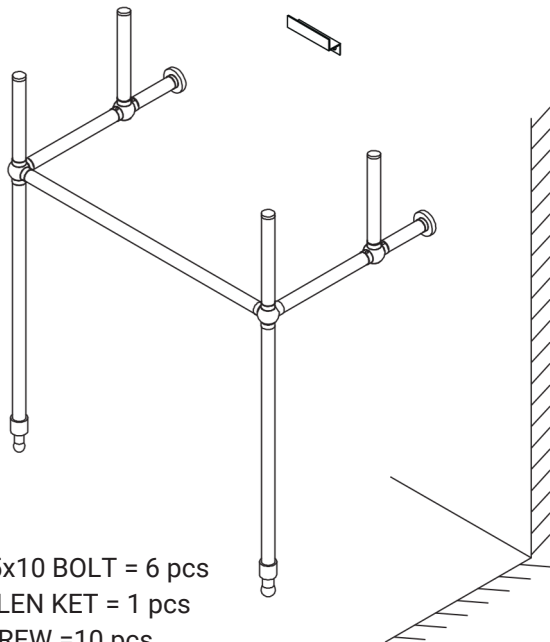


LEGS Installation Intruction

A x2	B x1	C x2	D x2	E x1
				
1  Step 1: Connect Front Legs(A) and Front Cross Bar(B); Line up bolt holes, using allen key, insert bolts, and hand tighten but slight loose.		2 Top leveler  Leg leveler Step 2: Assemble D to C as a whole part. Then assemble this whole part with step1's front frame. Tighten all bolts to make whole stand square. Adjust top scw levelers and leg levelers to make stand level		
3 		4   M5x10 BOLT = 6 pcs  ALLEN KET = 1 pcs  SCREW =10 pcs  PLASTIC PLUG = 10 pcs		