


Universal Rectangular Countertop Basin

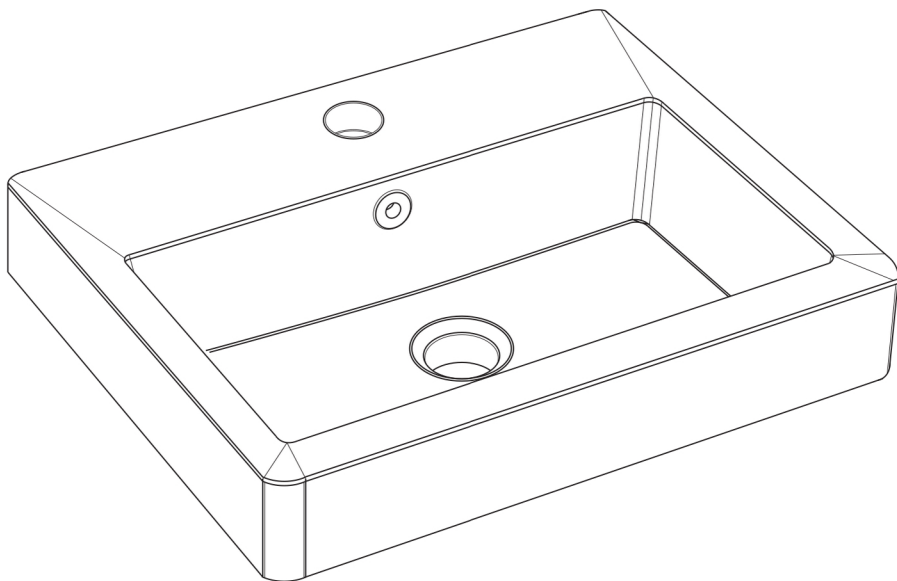

Fitting Instructions

Please follow them carefully and leave this manual with end user


Tools Required (Not Included):



Pencil



Drill



Tape
Measure



Spirit Level



Silicone


Ensure the appropriate PPE is used during installation

Countertop Installation

Step 1:

Place the basin onto your chosen counter-top in the desired position. Using a pencil, mark the holes and outside edge of the basin onto the counter-top. Ensure the markings are level.


Note: Mark the measurements onto the counter-top prior to dressing the basin.

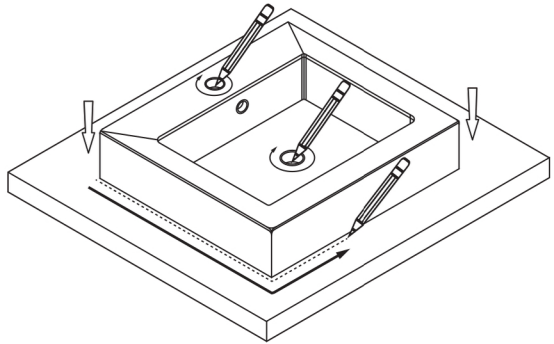

Step 2:



Move the basin away from the installation location. Using an appropriate sized hole saw. Carefully cut-out the markings on the counter top cut-out area, ensuring a clean cut.

Note: It is recommended to test fit the basin to ensure the basin sits on the counter-top correctly.

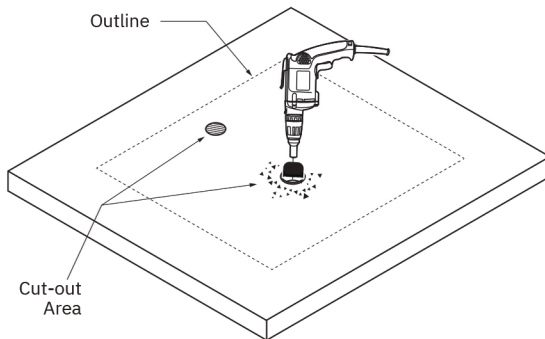

Step 3:

Place the basin facing down. Pipe a fine bead of good quality silicone sealant around the top edge of the basin.

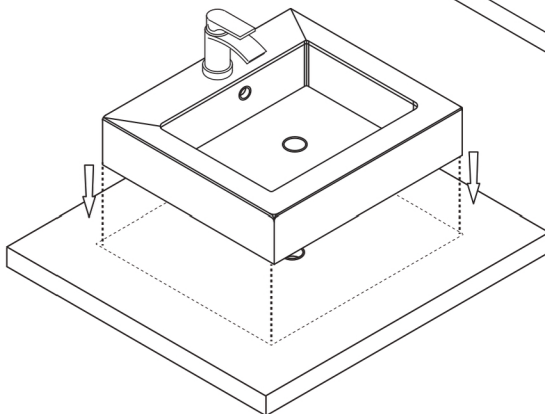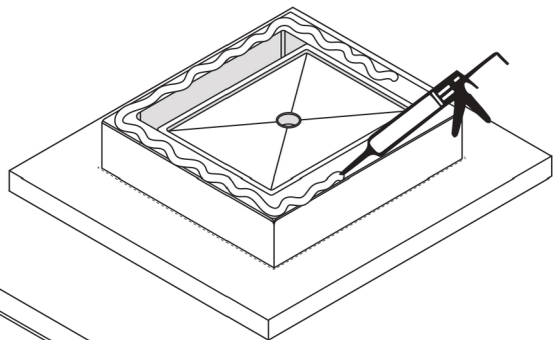


Step 4:

Place the basin firmly onto the counter-top using the original marking as a guide.

Note: It is recommended to pre-dress the basin before fitting the basin to the counter-top (as noted in page 2).

Step 5:

Wipe away any excess silicone with a damp cloth and allow 24 hours for the sealant to fully dry. Ensure all parts are level using a spirit level.

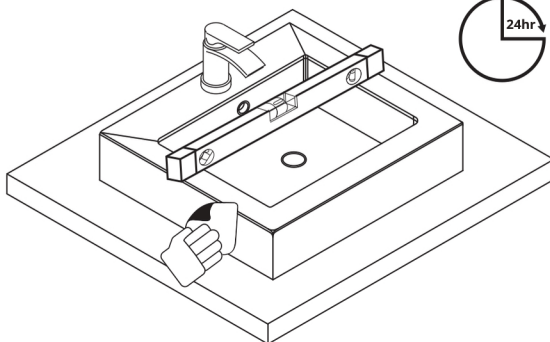

Cleaning and Maintenance:

We recommend that you regularly clean your basin with a mild dish detergent. After each use, wipe the basin dry with a soft cloth. Do not allow mineral deposits such as iron, salt, lime, or soap to build up on your basin. Refrain from using acidic household cleaners, wipes with harsh chemicals, or abrasives, as these will damage the basin.